









#### **VIDEO TUTORIAL**

### (i) Important!

This replacement procedure can be used for:
FIAT PUNTO (188\_) 1.2 60 (188.030, .050, .130, .150, .230, .250), FIAT PUNTO (188\_) 1.2 Bifuel, FIAT PUNTO (188\_) 1.2 Bipower (188BXA1A), FIAT PUNTO (188\_) 1.2 Natural Power, FIAT PUNTO Van (188\_) 1.2 60

The steps may slightly vary depending on the car design.

WWW.AUTODOC.CO.UK



### REPLACEMENT: TAILGATE STRUTS – FIAT PUNTO 188. TOOLS YOU NEED:



Flat Screwdriver

• Hydraulic transmission jack

WWW.AUTODOC.CO.UK 2–14



# Replacement: tailgate struts – Fiat Punto 188. AUTODOC experts recommend:

- Right and left gas struts of the boot lid should be replaced simultaneously.
- The replacement procedure is identical for the right and left gas struts of the boot lid.
- Please note: all work on the car Fiat Punto 188 should be done with the engine switched off.

#### CARRY OUT REPLACEMENT IN THE FOLLOWING ORDER:

1



Open the boot lid.

WWW.AUTODOC.CO.UK 3–14



Detach the rear parcel shelf straps.





Support the boot lid. Use a hydraulic transmission jack.





Release the circlip connecting the gas strut to the boot lid. Use a flat screwdriver.

WWW.AUTODOC.CO.UK 4–14





Release the circlip connecting the gas strut to the car body. Use a flat screwdriver.

## Replacement: tailgate struts – Fiat Punto 188. Tip from AUTODOC:

 To avoid any injuries, be sure to hold the boot lid while demounting the gas struts.

6



Remove the boot lid gas strut.

WWW.AUTODOC.CO.UK 5–14





Install the new boot lid gas strut.

# Replacement: tailgate struts – Fiat Punto 188. Professionals recommend:

 To avoid any injuries, be sure to hold the boot lid while installing the gas strut.

8



Snap on the circlip connecting the gas strut to the boot lid.

WWW.AUTODOC.CO.UK 6–14





Snap on the circlip connecting the gas strut to the car body.

10



Remove the hydraulic transmission jack.

### AUTODOC recommends:

 Fiat Punto 188 – Do not lower the transmission jack sharply to avoid damaging components and mechanisms of the car.

WWW.AUTODOC.CO.UK 7–14





Attach the rear parcel shelf straps.

12



Check the working condition of the boot lid gas springs after they are installed.

WWW.AUTODOC.CO.UK 8–14



Close the lid of the luggage compartment.

WWW.AUTODOC.CO.UK 9–14



# DID YOU FIND THESE INSTRUCTIONS HELPFUL?

YES

NO




**BECOME A MEMBER OF AUTODOC CLUB!** 

WWW.AUTODOC.CO.UK 10–14



### AUTODOC — TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

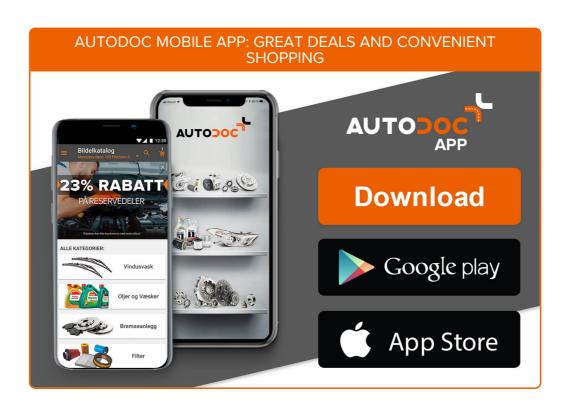



WWW.AUTODOC.CO.UK







WWW.AUTODOC.CO.UK 12–14







WWW.AUTODOC.CO.UK 13–14





### (i) Disclaimer:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AutoDoc shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AutoDoc shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AutoDoc shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AutoDoc strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2018 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by Autodoc GmbH.

WWW.AUTODOC.CO.UK